


## Measuring **Exterior Auto Awnings**

### 3. Post Installation.


In this scenario the awning is installed on the face of posts, most commonly to provide shade for a patio. The awning design allows for inside operation.

**3a.** Measure **Width** in **Millimetres** from the outside edge of one post to the other.

If you are butting up multiple blinds then at the joining post/s measure from just off the centre to allow for a comfortable fit.

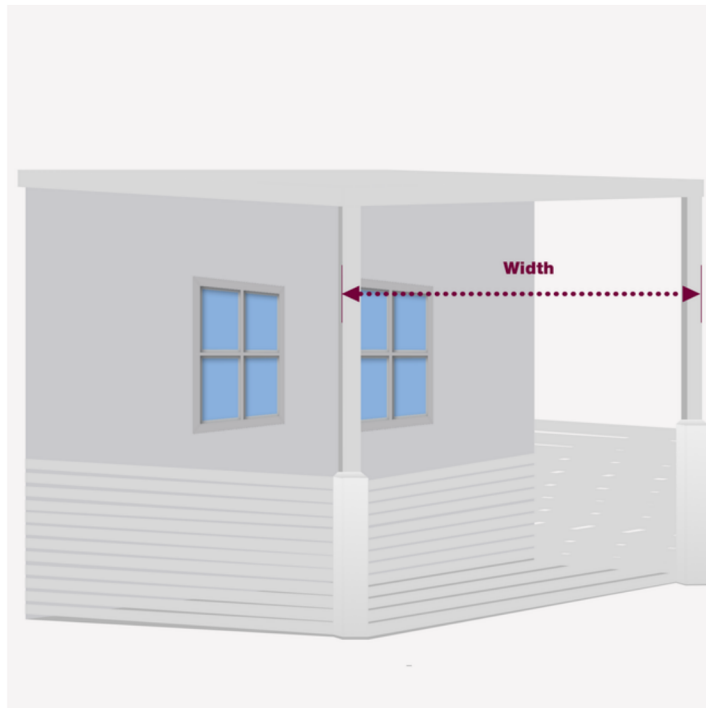

**2b.** Measure the **Height** in **Millimetres** of the fixing location to the desired end point (railing height/ground).

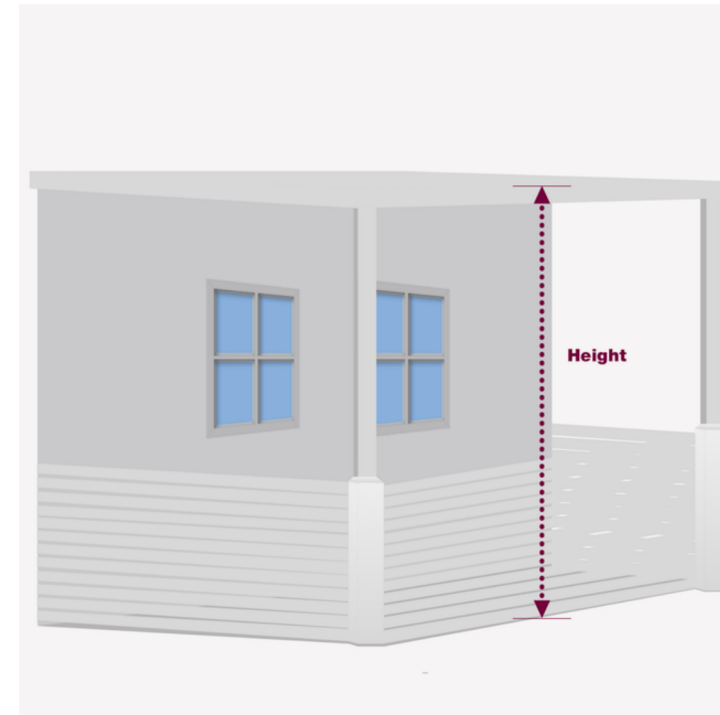

### Shop Now

Scan the QR Code to order your Exterior Auto Awnings